


ASSEMBLY PARTS

Stump Grinder Assembly Diagram A

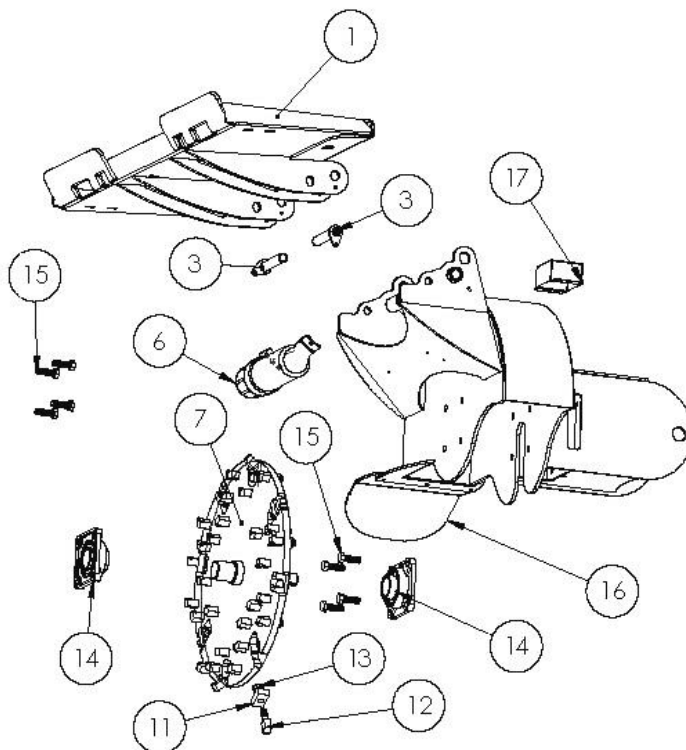

Stump Grinder Parts List A

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	D001127	Skid steer attachment	1
2	SSQT plate	Standard skid steer plate	1
3	D001028	1 x 5" Flange Pin	2
4	D001674	1/2" Hose holder	1
5		Sheet	-
6	D001428	Rotor Frame	1
7	D002336	S1028 Rotor with teeth	1
8	S1028	Rotor Assembly with Keyed Shaft (S18 & S24) less teeth	1
9	750 3P24-1	Rotor Assembly	1
10	D001084	S18 Shaft	1
11	D002924	S1000 tooth holder block (weld- in) 750 3P24-2	8
12	S1000	5/8" threaded stump grinder tooth	34
13	D001773	Tooth Nut	34
14	B2005	4 Blot 210 Flange Green Cast	2
15	F2002	2 x.625 Fine Thread	8
16	S18-10	Safety deflector plate	1
17	D001630	6-pack holder	1